


# KT-TF01 E-Bike Display User Manual

V1.0

Dear customer, please read this manual before you use KT-TF01 Display. The manual will guide you use the instrument correctly to achieve a variety of vehicle control and vehicle status displays

## 1.Functions and Display

Instrument adopts the structural form of integrated design of the main part of the instrument and the operation button.

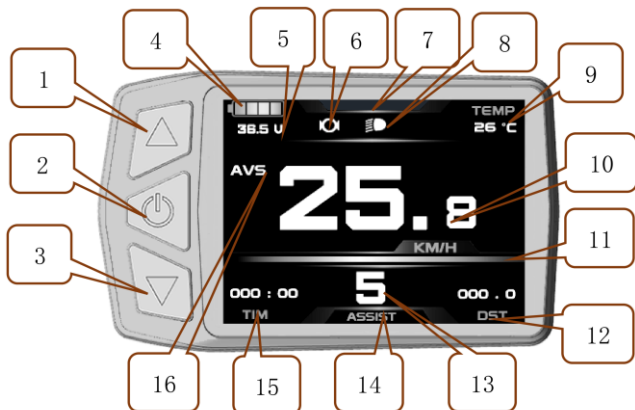

1		UP Button	11		Riding speed display
2		SW Button	12	<b>DST</b>	Trip distance
3		DOWN Button		<b>ODO</b>	Total distance
4		Battery capacity indicator	13	<b>PAS</b>	Pas level
5	<b>VOL</b>	Battery voltage			6Km/H push power assist
6		The brake display	14	<b>THROTTLE</b>	Throttle display
7		Power display		<b>ASSIST</b>	ASSIST display
8		headlights	15	<b>TIM</b>	Single trip time
9	<b>TEMP</b>	Environment temperature		<b>TTM</b>	Total trip time
	<b>MOTT</b>	Motor temperature		<b>AVS</b>	Average speed
10	<b>Km/H</b>	Real riding speed	16	<b>MXS</b>	MAX speed

## 2.Operation

### 1. ON/OFF

Hold button long to turn on the power, and hold long for a second time to turn off the power. When the motor stops driving and when the e-bike is not used for a consecutive 5 minutes, it will automatically shut down and turn off the motor power supply.

### 2. Display 1



Hold button to start up and enter display.

#### 2.1 Turn on headlights



Hold long to turn on headlights (the controller should have headlight drive output function); hold long again to turn off the headlights.

#### 2.2 Assist ratio gear (ASSIST) switch



Press or to switch 0-5 file gear. Gear 1 is for the minimum power, gear 5 is for the highest power. Each startup will automatically restore the gear shutdown last time (the user can set randomly). Gear 0 is without booster function.

#### 2.3 6Km/H assist promotion function



Hold and flashes, the vehicle drives at the speed not more than 6Km/h. Release button, the function is invalid.

#### 2.4 display and delete of single data



After power on for 5 seconds, hold and at the same time, single trip riding time (TIM) and single trip distance (DST) flash, hold button shortly, the content of both is cleared. If failed holding the button within 5 seconds, it will automatically return the display interface after 5 seconds, original content is preserved.

### 3. Display 2



Press button in display 1 to enter display 2. In the riding mode within 5 seconds, display 2 automatically returns to display 1.

### 4. Display 3



Press button in display 2 to enter display 3. In the riding condition, 5 seconds later, a single maximum speed (MXS) display automatically returns to the real riding speed (Km/H).

5. In display 3, hold button shortly (SW), and the display will re-enter display 1.

6. Hold button to turn off the display and the power supply of controller.

7. Automatically prompt interface

#### 7.1 Error Code Display:

- 1 Motor position sensor fault!
- 2 Motor or controller short circuit fault!
- 3 THROTTLE fault!

Once the fault was removed, it automatically exits from the fault code display interface.

#### 7.2 Motor temperature alarm

When the motor temperature (the internal motor should be equipped with the temperature sensor and the output of temperature detection signal) is over the warning value, MOTT °C (°F) flashes to alarm at any display, meanwhile the motor controller will offer the appropriate protection to motor.

## 3.General Project Setting

### 1. Set Max speed

LIM : 25km/h	C1 : 2
DIM : 26"	C2 : 0
UNT : 0	C3 : 8
P1 : 87	C4 : 0
P2 : 1	C5 : 10
P3 : 1	C6 : 3
P4 : 0	C7 : 0
P5 : 12	C8 : 0
NEXT >	

Within 5 seconds after power on, hold and at the same time to enter General Setting interface, move to maximum speed setting LIM, press button LIM flash, press or to set the maximum riding speed. Press button Maximum riding speed stop flashing, then press to save.

### 2. Wheel diameter setting

LIM : 25km/h	C1 : 2
DIM : 26"	C2 : 0
UNT : 0	C3 : 8
P1 : 87	C4 : 0
P2 : 1	C5 : 10
P3 : 1	C6 : 3
P4 : 0	C7 : 0
P5 : 12	C8 : 0
NEXT >	

Move to DIM, press , it flashes and then to DIM setting, press and to set wheel, chosen field within 5、6、8、10、12、14、16、18、20、23、24、26、27.5、700C、28 and 29 inches. Press to stop flashing and save.

### 3. Set the metric units

LIM : 25km/h	C1 : 2
DIM : 26"	C2 : 0
UNT : 0	C3 : 8
P1 : 87	C4 : 0
P2 : 1	C5 : 10
P3 : 1	C6 : 3
P4 : 0	C7 : 0
P5 : 12	C8 : 0
NEXT >	

Move to UNT, press , to enter UNT setting when it flashes, chosen field is within 0、1、2、3. Press button to save and press to go to the next parameter settings.


Code	Speed	Mileage	Ambient temperature
UNT:0	Km/h	Km	°C (Temperature)
UNT:1	MPH	Mil	°C (Temperature)
UNT:2	Km/h	Km	°F (Fahrenheit)
UNT:3	MPH	Mil	°F (Fahrenheit)

### 4. Exit from routine project setting

All three routine project settings can exit from the setting environment and return to the display by holding button long after each setting is completed, meanwhile the setting values are saved, under each setting interface, if the button failed holding for more than 1 minute, it will automatically return to display 1, and the setting value is invalid.

## 4.Outline Drawings and Dimensions

### 1. Dimensions of main instrument body

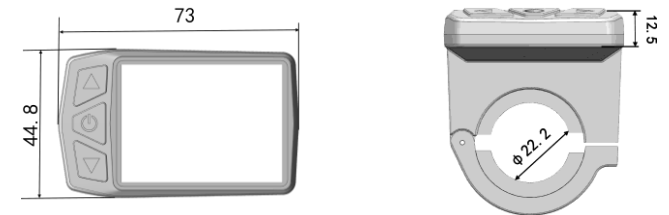

### 2. Wiring diagram

